


Bridge Slab Traffic Load Optimisation (Reciprocal Influence Method)

For LUSAS version:	22.0
For software product(s):	LUSAS <i>Bridge</i> and LUSAS <i>Bridge Plus</i>
With product option(s):	Vehicle Load Optimisation.

Description

This example uses the LUSAS Vehicle Load Optimisation (VLO) software option and the Reciprocal Influence Method to aid in the linear static analysis of a 3-span curved concrete bridge deck subject to Eurocode traffic loading.

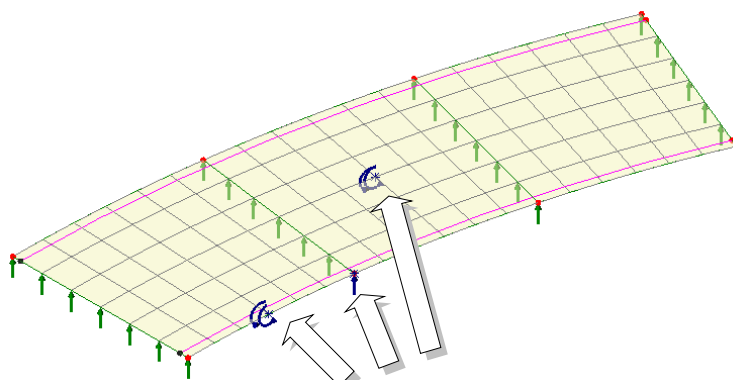

Points of interest for influence surface generation

Bridge Slab Traffic Load Optimisation (Reciprocal Influence Method)

The structure is modelled using thick plate elements, representing a deck of inner radius 75m, outer radius 86m and thickness 0.7m. The deck has a width of 11m consisting of a 10m wide carriageway region and two 0.5m wide verges. The live loading is to be calculated for three defined influence surfaces using the LUSAS VLO software option.

Units used are kN, m, t, s, C throughout.



Note. LUSAS VLO is a software option for LUSAS *Bridge*. It extends the vehicle loading capabilities in LUSAS *Bridge* and produces worst-case traffic load effects more easily and much faster than by manual methods. LUSAS VLO generates the most onerous traffic load patterns according to a selected code of practice, based upon influence surfaces for specified load effects (moments, shears, reactions, stresses etc) at selected locations in the structure. A number of Eurocode National Annexes and other codes are supported. This example analyses a bridge deck using EN1991-2 Recommended Values. Subsequent analysis for comparison purposes is carried out using the UK and Swedish National Annex options.



Note. A separate example titled “Bridge Slab Traffic Load Optimisation (Direct Envelope Method)” shows the use of a different method which provides an optimised load effect of interest (e.g. M_y) at all locations in a feature (a line or surface) for which the Influence Envelope attribute has been assigned, and optionally for coexistent load effects (e.g. F_x , F_y , F_z , M_x , M_z) at those assigned locations.



Note. The reciprocal theorem method described in this example provides less functionality than the Direct Method, but it is faster when only a limited number of influences are required at strategic locations on a bridge deck (as in this example).

Modelling Objectives

The operations in the creation of the model are as follows:

- ☐ Sweep a curved deck from a line.
- ☐ Mesh the Surfaces with thick plate elements (regular mesh).
- ☐ Define and assign geometric properties to describe the slab thickness.
- ☐ Define and assign material properties.
- ☐ Define and assign bearing supports.
- ☐ Define and assign dead loading.
- ☐ Define three influence surfaces which will allow calculation of the most onerous traffic load pattern for:
 1. Mid-span bending, inner curve, first span.
 2. Mid-span bending, mid-node, second span.
 3. Reaction at the first internal support.
- ☐ Use LUSAS VLO to calculate the most onerous traffic load pattern for the three influence surfaces.

Keywords

2D, Plate, Slab, Modelling, Eurocode, Element Axes, Influence Surface, Reciprocal Method, LUSAS VLO, Vehicle Load Optimisation, Load Combination, Bending Moments, Reactions, Transformed Results, Peak Values

Associated Files

Associated files can be downloaded from the user area of the LUSAS website.



- ☐ **deck_modelling.lvb** carries out the modelling of the slab deck, including influence locations, for subsequent use with the LUSAS VLO software option.

Vehicle load optimisation in LUSAS

Vehicle load optimisation (VLO) makes use of influence surfaces and influence analysis to identify the most onerous vehicle loading patterns on bridges for a chosen design code and to apply these loading patterns to LUSAS models. A vehicle load optimisation wizard provides the means of defining parameters, for a particular design code, to generate the most critical traffic loading pattern for each influence shape under consideration. In this example, the bridge deck is loaded according to EN1991-2 Recommended Values.

Modelling

Running LUSAS Modeller

For details of how to run LUSAS Modeller see the heading *Running LUSAS Modeller* in the *Introduction to LUSAS Worked Examples* document.



Note. This example is written assuming a new LUSAS Modeller session has been started. If continuing from an existing Modeller session select the menu command **File>New** to start a new model file. Modeller will prompt for any unsaved data and display the New Model dialog.

Creating a new model

- Enter a File name of **Deck**
- Use the default User-defined working folder.
- Ensure an Analysis type of **Structural** is set.
- Select an Analysis Category of **2D Grillage/Plate**
- Set Model units of **kN,m,t,s,C**

Bridge Slab Traffic Load Optimisation (Reciprocal Influence Method)

- Leave the Timescale units as **Seconds**
- Select a Startup template of **2D Plate**.
- Ensure the Layout grid is set as **None**
- Enter the Title to be **Deck analysis using traffic load optimisation**
- Click the **OK** button.

 
The Attributes  treeview will be populated with potentially useful basic line mesh, geometric and support entries appropriate to the settings made on the new model dialog.



Note. The Undo button  may also be used to correct a mistake. The undo button allows any number of actions since the last save to be undone.


Geometry

In this model, one span of the complete bridge deck is modelled in its entirety (including specifying geometric properties, material, supports, etc.) before it is then copied to form the complete 3-span structural model.




Enter coordinates of **(0,75)** and **(0,86)** to define a Line representing the end of the deck.

 - Click the **OK** button to finish.
- Select the Line just drawn.



Select the **Rotate** option and enter an angle of **-7.5** degrees to rotate about the **Z-axis** about the origin **0,0**

- Click **OK** to sweep the Line to create a surface.

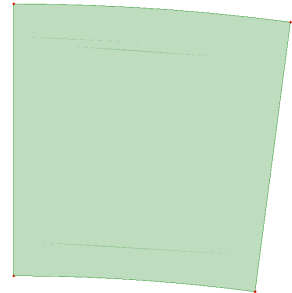


Meshing

This analysis will consider only out-of-plane bending effects, and no in-plane behaviour therefore plate elements will be used. Note that when thick plates are used care must be taken to ensure that results are transformed correctly when plotting contours and values of bending moments.

- With the whole model selected, drag and drop the surface mesh dataset **Thick plate, linear order** from the  Treeview onto the selected features.

The default number of line mesh divisions of 4 divisions per line will be drawn. This gives a somewhat coarse mesh so the default number of line mesh divisions will now be changed.

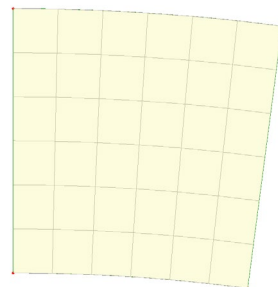

File
Model Properties...

- With the **Meshing** tab selected, set the default number of mesh divisions to **6** and click **OK**

The new mesh divisions will be displayed.


Geometric Properties

- Enter a thickness of **0.7**

The eccentricity box should, in this case, be left blank. Using an eccentricity would infer some in-plane effects, when, as described above, this analysis is intended to consider only out-of-plane effects. In 3D structures where behaviour is dependent upon both flexural and membrane effects, shell elements may be used.

- Enter the dataset name as **Slab thickness** and click **OK**
- With the whole model selected, drag and drop the geometric dataset **Slab thickness** from the  Treeview onto the selected features.

Geometric property assignments are visualised by default.

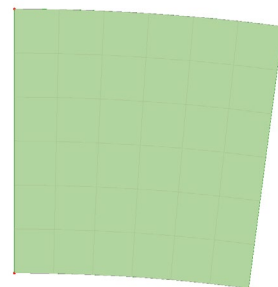

Attributes
Geometric >
Surface...

Material Properties

- With the whole model selected, drag and drop the material dataset **Concrete (Ungraded | Concrete)** from the  Treeview onto the selected features and assign to the selected surfaces by clicking the **OK** button.


Supports

- Set the Translation in the **Z**-direction to be **Fixed**.
- Enter a name of **Fixed in Z** and click **OK**.

Attributes
Support

Bridge Slab Traffic Load Optimisation (Reciprocal Influence Method)

- Select the two lines on the left and right of the surface.
- Drag and drop the support dataset **Fixed in Z** from the  Treeview onto the selected Lines.
- Ensure the **Assign to lines** and **All analysis loadcases** options are selected and click **OK**

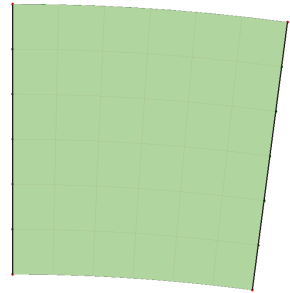


The supports will be visualised on the model.

To check the location and direction of the supports:



Use the isometric view button to rotate the model.


- To complete the full model of the bridge deck, select the whole model using the **Ctrl** and **A** keys together.

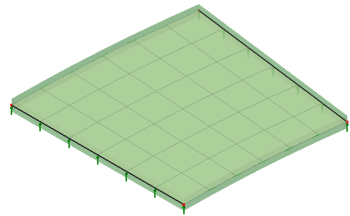

Select the **Rotate** option and copy the features selected through an angle of **-7.5** degrees about the **Z-axis** and about the origin **0,0**

- Enter the number of copies as **2** and click the **OK** button.

The full 3-span model of the bridge deck will be created.

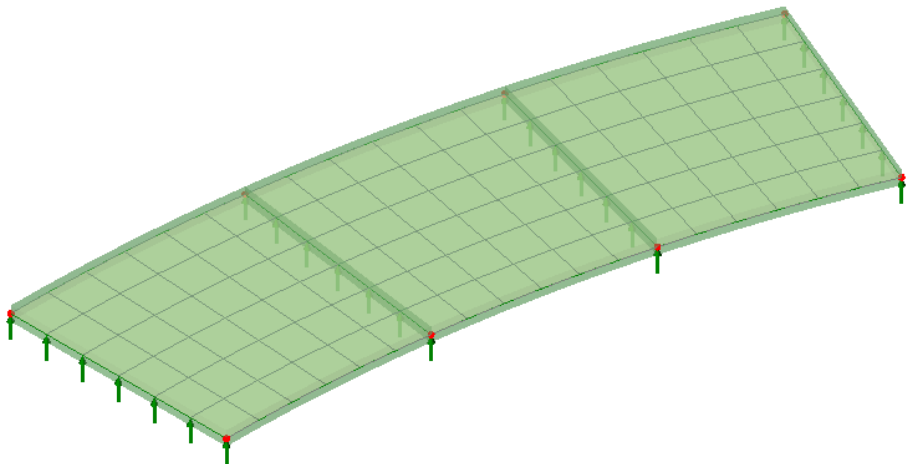


Note. Many of the more common tasks are provided in a context menu for the View window. With the model geometry selected clicking the right-hand mouse button within the view will display a context menu with **Copy**, **Delete**, **Move** and **Sweep**.

Self-Weight

- With the whole model selected, drag and drop the loading dataset **BFP1 (Gravity – vertical)** from the Treeview onto the selected features. Ensure the **Assign to surfaces** option is selected and click **OK** to assign to **Analysis 1, Loadcase 1**.

The gravity loading will be visualised on the model.

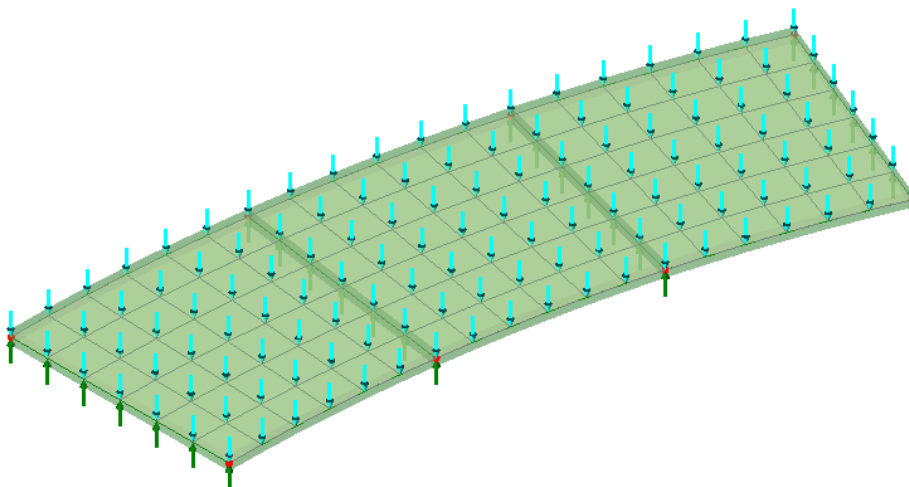

- In the Treeview, using the right-hand mouse button, select **Loadcase 1** and select the **Rename** option. Change the loadcase name to **Self Weight**

Defining a local coordinate system

Since this model is a curved deck a cylindrical local coordinate system will be used for the direction definition. Specifying a direction definition sets the vertical, longitudinal and transverse axes for a model to assist with model orientation and the calculation of particular effects. A local direction definition is used for aligning influence attributes along a singly curved bridge deck.

Attributes
Local Coordinate...

- Select the **Cylindrical** option and ensure that the **Z-axis** option is set. Enter a dataset name of **Cylindrical about Z-axis** and click **OK**

To use this local coordinate system:

Tools
Direction definition...

- In the Longitudinal section of the dialog set the **Local axis** to be **Cylindrical about Z-axis** for **Theta** and click **OK**.

Influence Attributes

In order to use the vehicle load optimisation facility, it is necessary to identify what quantity is to be optimised and at what location in the structure. This is achieved by specifying appropriate influence surfaces, which is done by defining and assigning influence attributes to the model. LUSAS generates influence surfaces for each of the chosen locations and load effects, and in this case, by using the Muller-Breslau (reciprocal) theorem. Note that Direct Method influence attributes are also available and provide different capabilities. See the online help for more details.

To make it easier to select the nodes required to define the influence parameters the geometric and load visualisation will be removed from the display.



Select the fleshing on/off button to turn-off the geometric visualisation.



Select the loading on/off button to turn-off the loading visualisation.

- Right-click and turn off the display of the **Geometry** layer in the Treeview.

For this example, three influence surfaces will be defined.


Influence Surface Definition - Edge Mid-span Bending

The first influence attribute to be defined will be used to investigate mid span edge bending in the first span.

- Select a **Moment** influence type **About transverse** influence direction for a **Negative** displacement direction (because the maximum sagging moment is of interest).
- Enter the influence attribute name as **Bending span 1** and click **OK**.

The dialog box titled 'Reciprocal Influence' contains the following settings: Influence type is 'Moment', Influence direction is 'About transverse', and Displacement direction is 'Negative'. The Name field is set to 'Bending span 1'. At the bottom are buttons for 'OK', 'Cancel', 'Apply', and 'Help'.

- Select the mid-span node at the inside edge of the first span.
- Drag and drop the influence attribute **Bending span 1** from the Treeview onto the selected node.

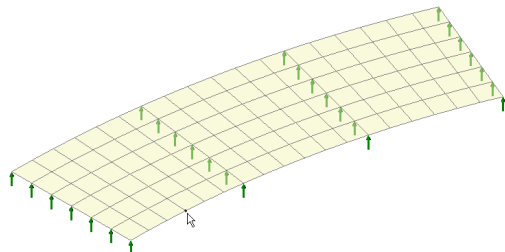

This adds an influence assignment

(with a corresponding coordinate) to the  Treeview.

For this example, and for speed and clarity reasons, only one node will be selected for each influence attribute.



Caution. Reciprocal influence attributes can be assigned to as many nodes or points on the model as necessary but should only be assigned to those nodes or points for which they are applicable. For example, the Bending span 1 influence attribute (defined for a negative displacement direction) should only be assigned to those nodes in the first span of the bridge for which a negative influence shape applies. For nodes where a positive influence shape exists a Reciprocal influence attribute with a positive displacement direction should be assigned. In general, when using Reciprocal influence attributes, the influence shapes for nodes of interest should be viewed after a solution is obtained to ensure that they have been defined for the influence shape seen.




Note. A benefit of using Direct Method influence attributes over reciprocal theorem ones is that they can be assigned to the whole model regardless of whether nodes lie in a positive or negative region of an influence shape.

Influence Surface Definition – Mid-span Bending Span 2

The second influence attribute to be defined will be used to investigate mid-span bending in the middle of the slab in the second span.

Attributes	
Influence	>
Reciprocal	
Theorem...	

- Select a **Moment** influence type **About transverse** influence direction for a **Negative** displacement direction (because we are interested in the maximum sagging moment).
- Enter the influence attribute name as **Bending span 2** and click **OK**.
- Select the node at mid-span of the second span.
- Drag and drop the influence attribute **Bending span 2** from the  Treeview onto the selected node.

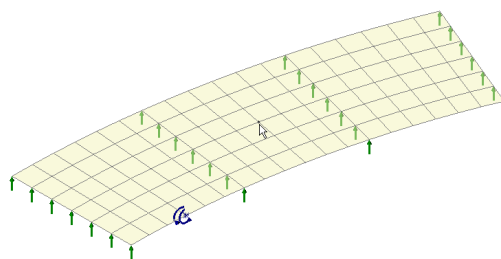

This adds the influence assignment to the  Treeview.




Tip. For this example, giving influence attribute names that relate to each span and support (rather than just defining one influence attribute called 'Bending' or 'Reaction' enables easier identification of the influence results in the  Treeview.

Influence Surface Definition - Maximum Reaction

The third influence attribute to be defined will be used to investigate the maximum reaction at the inner edge of the second line of supports.

- Select a **Reaction** influence type in the **Vertical axis** influence direction for a **Positive** displacement direction.
- Enter the influence attribute name as **Reaction support 2** and click **OK**.
- Select the node at the edge of the first support as shown.
- Drag and drop the influence attribute **Reaction support 2** from the Treeview onto the selected node.

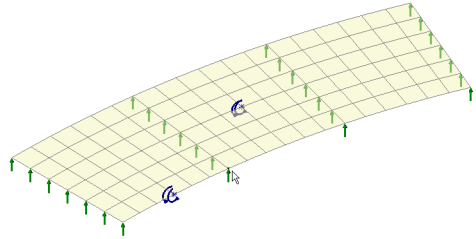


Checking the Defined Influence Points



Select the Home button to return to a plan view of the model.

The influence visualisations will now be as shown.

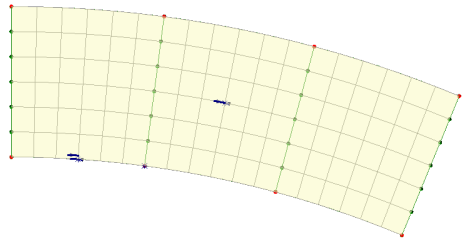

Define the Kerb Lines

Kerb lines are used to define the extent of a loadable carriageway.

- Turn on the display of the **Geometry** layer in the Treeview.
- Select the Point at the left-bottom corner of the deck.



Enter a translation of **0.5** in the **Y** direction. Click **OK**.

- Select the Point just created.



 
Enter a translation of **10** in the **Y** direction. Click **OK**.

- Select the two Points that have been created.

Attributes
Influence >
Reciprocal
Theorem...


Geometry
Point >
Copy...

Geometry
Point >
Copy...



Select the **Rotate** option and enter an angle of **-22.5** degrees to rotate about the **Z-axis** about the origin **0,0**

- Click **OK** to sweep the Points to create a two lines representing the kerbs.

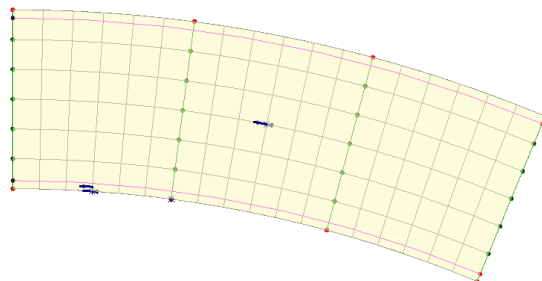

Save the model



Save the model file.



 
This completes the preparation of the model for influence analysis.

Rebuilding the Model

If errors have been made in the modelling of this example that for some reason you cannot correct, a file is provided to re-create the model information correctly, allowing a subsequent analysis to be run successfully. You may download this file from the user area of the LUSAS website.




- ☐ **deck_modelling.lvb** carries out the modelling of the example including the loading.



Start a new model file. If an existing model is open Modeller will prompt for unsaved data to be saved before opening the new file.

 
- Enter the file name as **deck**
- To recreate the model, select the file **deck_modelling.lvb** that was downloaded and placed in a folder of your choosing.



Running a Reciprocal Influence Analysis

If it is required to visualise influence surfaces and confirm they are correct before they are used to generate optimised loading patterns, this can be optionally done by solving a Reciprocal Influence Analysis in isolation from any other analyses.

- Press the Solve Now  button and deselect the **Analysis 1** option to leave just the **Reciprocal Influence Analysis** check box ticked. Click the **OK** button.

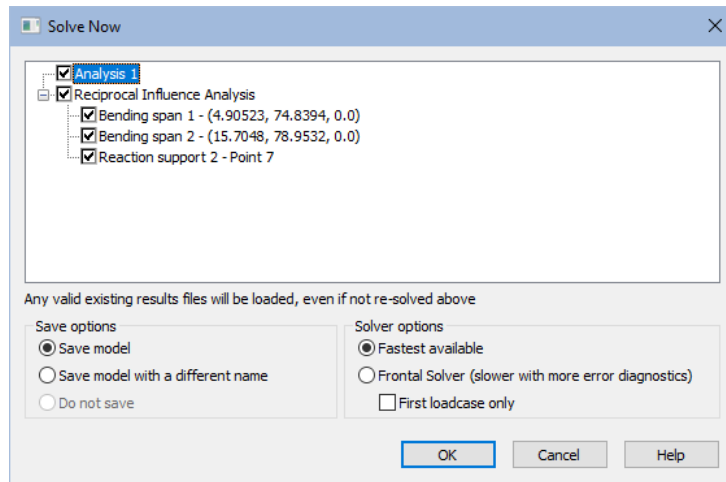

- When solved, the  Treeview will contain one results file for each influence surface.


Visualising Influence Surfaces



Rotate the model to an isometric view.


- From the  Treeview right-click on the Reciprocal Influence Analysis results loadcase **Bending span 1** and select the **Set Active** option. An **Influence Shape** entry will be added to the  Treeview.
- Ensure the **Influence Shape** layer is present and turned on.
- If present, turn-off the display of the **Mesh** and **Geometry** layers from the  Treeview.
- In the  Treeview double-click on the **Attributes** entry, find and right-click on the **Supports** tab, and select the **All** button. Select the option **From results file** and click **OK**.

Bending span 1 (moment) influence surface

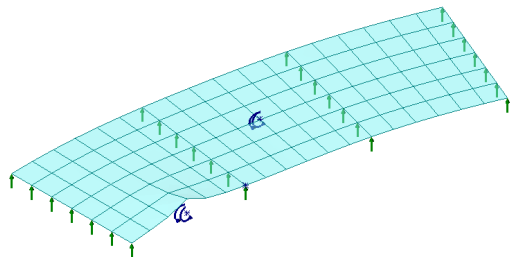


- From the  Treeview right-click on the Reciprocal Influence Analysis results loadcase **Bending span 2** and select the **Set Active** option.

Bending span 2 (moment) influence surface

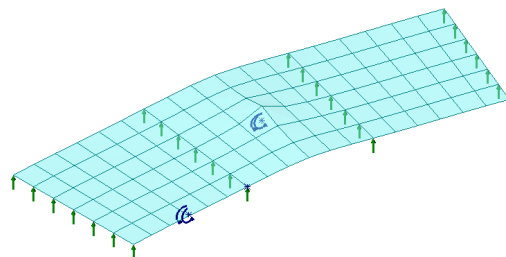

- From the  Treeview right-click on the Reciprocal Influence Analysis results loadcase **Reaction support 2 (reaction)** and select the **Set Active** option.

Reaction support 2 (reaction) influence surface

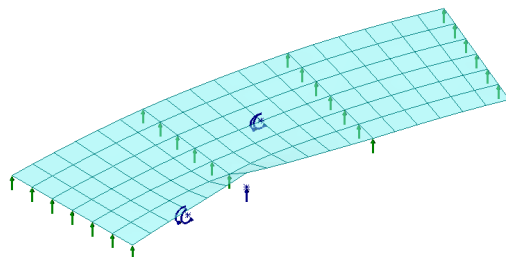

Using the Vehicle Load Optimisation facility to calculate the most critical loading patterns


The vehicle load optimisation software option automates the creation of traffic load patterns in accordance with a selected design code for locations specified on the model. The example as written uses EN1991-2 Recommended Values, which is supported by the LUSAS VLO software option. Other EN1991-2 National Annexes may be chosen. Results for selected other National Annexes are shown at the end of the example.

- Turn-off the display of the **Influence shape** layer and turn back on the display of the **Mesh** and **Geometry** layers from the  Treeview.

Select the kerb lines

Prior to running the vehicle load optimisation, the kerb positions defining the extent of the loadable area of carriageway must be selected.

- **Select the two lines** representing the kerb positions / extent of the traffic lane.

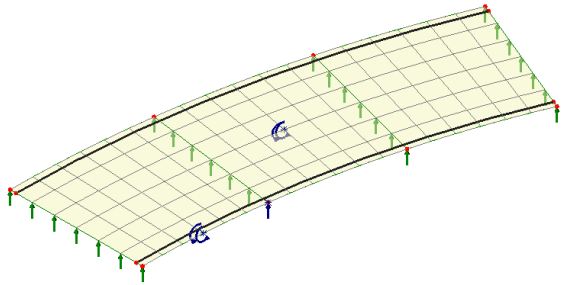


Bridge

Vehicle Load
Optimisation...

VLO Run

Define Vehicle Load Optimisation parameters

- Select **Europe** from the Country drop down list.
- Select **EN1991-2 Recommended Values 2009** from the Design code drop down list.
- Deselect the **View onerous effects table**.
- Select **Create loading patterns** for **All chosen loadcases**
- **VLO Analysis 2** will be automatically entered for the Analysis entry in the  Treeview. (Note that an alternative name can be entered by selecting the New option from the drop-down list).
- Ensure the Name is set as **VLO Run 1**

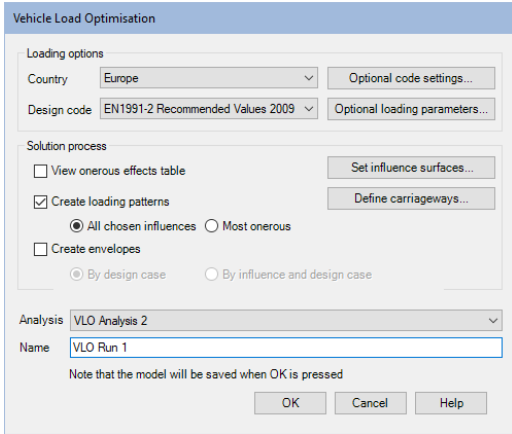


The 'Vehicle Load Optimisation' dialog box contains the following settings:

- Loading options:** Country: Europe; Design code: EN1991-2 Recommended Values 2009.
- Solution process:** View onerous effects table: ☐; Create loading patterns: ☒; Create envelopes: ☐. Radio buttons: All chosen influences (selected), Most onerous.
- Analysis:** VLO Analysis 2; Name: VLO Run 1.
- Buttons: OK, Cancel, Help.

Browse the optional code settings

- Select the **Optional code settings** button and the optional loading parameters dialog will appear for the design code selected.

On this dialog any representative values that are required and load groups that are to be included can be specified. Special vehicle types can be specified, and advanced settings can be defined.

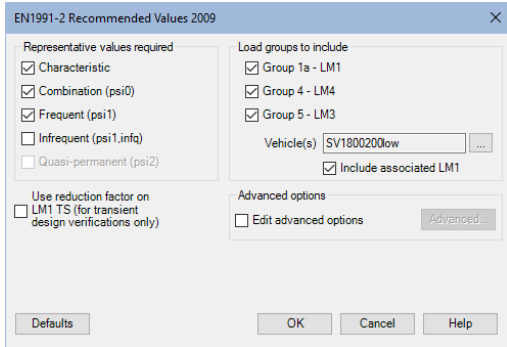

The 'EN1991-2 Recommended Values 2009' dialog box contains the following settings:

- Representative values required:** Characteristic (checked), Combination (psi0) (checked), Frequent (psi1) (checked), Infrequent (psi1,infq) (unchecked), Quasi-permanent (psi2) (unchecked).
- Load groups to include:** Group 1a - LM1 (checked), Group 4 - LM4 (checked), Group 5 - LM3 (checked).
- Vehicle(s):** SV1800200low.
- Include associated LM1:** ☒.
- Use reduction factor on LM1 TS (for transient design verifications only):** ☐.
- Advanced options:** Edit advanced options (disabled).
- Buttons: Defaults, OK, Cancel, Help.

Note that a single special vehicle (**SV1800200low**) is specified as a default in these recommended values and that a vehicle(s) appropriate to the structure being designed should be specified in practice.

- For this example leave the dialog as it is but un-check the **Infrequent** option, then click the **OK** button to accept the remaining default values and return to the main VLO dialog.

Browse the optional loading parameters


- On the main VLO dialog, select the **Optional loading parameters** button
- On this Options dialog ensure the **Longitudinal increment** is set to **0.25**, the **Transverse increment** is set to **0.25** and the Vehicle direction is set to **Both**.
- The option to **Use rationalised placement method** should be set.
- Click **OK** to return to the main Vehicle Load Optimisation dialog.

Define the carriageways

- On the main VLO dialog, select the **Define carriageways...** button.

Because the kerb lines have been selected the carriageway shape and angle of carriageway are known. **Kerbs from selection** will be automatically selected.

- Click **Apply** to return to the main Vehicle Load Optimisation dialog.

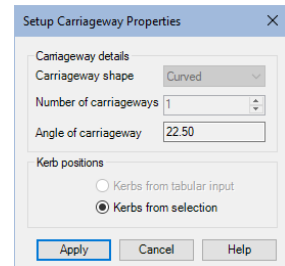


The 'Setup Carriageway Properties' dialog box contains the following fields and options:

- Carriageway details**
 - Carriageway shape: Curved (dropdown)
 - Number of carriageways: 1 (spin box)
 - Angle of carriageway: 22.50 (text box)
- Kerb positions**
 - ☐ Kerbs from tabular input
 - ☒ Kerbs from selection
- Buttons: Apply, Cancel, Help

Define the influence surfaces

- On the main Vehicle Load Optimisation dialog, select the **Set influence surfaces** button.
- Ensure the **Include all influence surfaces** option is selected.
- Ensure the **Positive** checkbox option is selected for each influence.

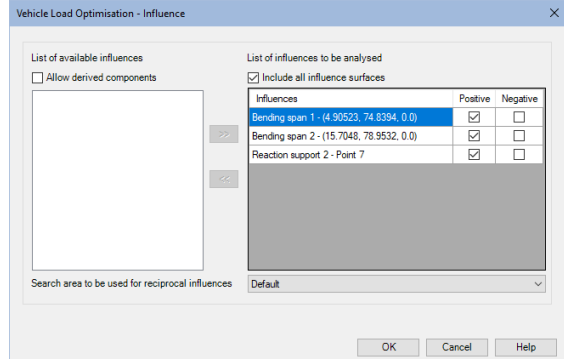

The 'Vehicle Load Optimisation - Influence' dialog box contains the following elements:

- List of available influences**
 - ☐ Allow derived components
- List of influences to be analysed**
 - ☒ Include all influence surfaces
 - Table with columns: Influences, Positive, Negative
- Search area to be used for reciprocal influences**: Default (dropdown)
- Buttons: OK, Cancel, Help

Influences	Positive	Negative
Bending span 1 - (4.90523, 74.8394, 0.0)	☒	☐
Bending span 2 - (15.7048, 78.9532, 0.0)	☒	☐
Reaction support 2 - Point 7	☒	☐




Note. For an influence analysis carried out using Reciprocal Method attributes, the influence shape for a chosen influence location will determine whether Positive or Negative should be chosen. For this example, vehicle loading placed onto the positive areas will create the maximum negative moment required.

- Click **OK** to return to the main load optimisation dialog.
- Press the **OK** button on the main VLO dialog to run the vehicle load optimisation analysis.

This loading optimisation will take just seconds on the latest computers, and when successfully completed, Characteristic, Combination and Frequent results table entries

and results loadcases and Loading folders will appear in the  Treeview for each influence as shown in the following image.

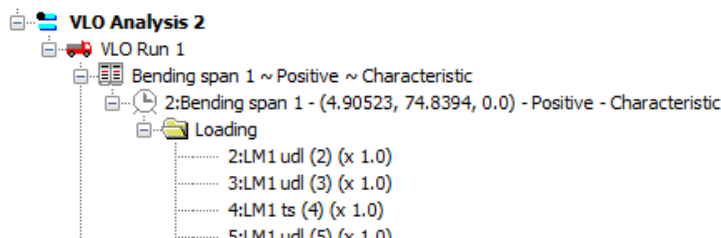

Note. If ‘Create loading patterns’ was not selected on the main VLO dialog the most onerous loading effects can be created individually when viewing VLO results table entries by using a ‘Create Loading’ button that appears instead of the ‘Loading Created’ one.

So, as can be seen, the VLO run currently includes loading arrangements for influence locations but no results. Whilst loading patterns can be visualised, results are available only after the VLO analysis has been solved.

Visualising Load Definitions

- In the  Treeview ensure the **Influence shape** layer is turned-off, and the **Mesh** layer is turned on.
- In the  Treeview turn-off the display of the **Geometry** layer.



Select the loading on/off button to **turn-on** the loading visualisation.




If necessary, select the supports on/off button to **turn-on** the support visualisation.

The load definition may be visualised for each loadcase as follows:

Viewing Characteristic Loading for Edge Mid-span 1

- In the  Treeview, expand the **VLO Analysis 2** entry, expand the **VLO Run 1** entry, and expand the **Bending span 1 – Positive – Characteristic** entry.
- Right-click on the loadcase **Bending span 1 - (x,y) – Positive - Characteristic** and pick the **Set Active** option.

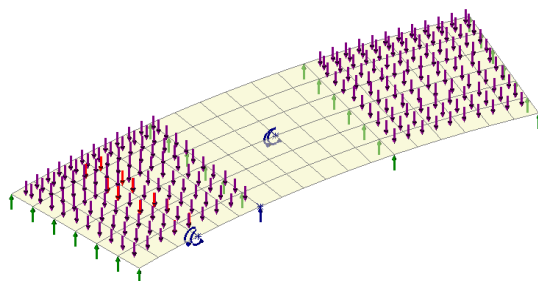


Here, it can be seen that Group 1a dominates and the load pattern is made up of LM1 tandem systems and LM1 UDL patches. The 10m carriageway width accommodates three 3m wide lanes. With reference to EN1991-2:2003 table 4.2 and clause 4.2.4 (4), Lane Number 1, with the heaviest tandem and udl loads, is positioned adjacent to the influence definition on one side of the deck. Moving away from the location of interest, lanes 2 and 3 appear in order. The remaining area (1m wide) appears on the far side of the bridge deck. Spans 1 and 3 only are loaded (span 2 is not part of the adverse area).

Viewing Characteristic Loading for Mid-span Bending Span 2

- In the  Treeview right-click on the loadcase **Bending span 2 - (x,y) – Positive – Characteristic** and pick the **Set Active** option.


Here, again, Group 1a dominates and the load pattern is made up of LM1 tandem systems and LM1 udl patches. Lane Number 1, with the heaviest tandem and udl loads, is positioned adjacent to the influence definition, near the middle of the deck. Lanes 2 and 3 appear each side of Lane 1 and the 1m wide remaining area appears on the opposite side of the bridge deck compared to that when considering the previous loadcase. This illustrates how the ranking and location of lanes is modified as appropriate (EN1991-2:2003 clause 4.2.4(2)). Span 2 only is loaded (spans 1 & 3 are not part of the adverse area).

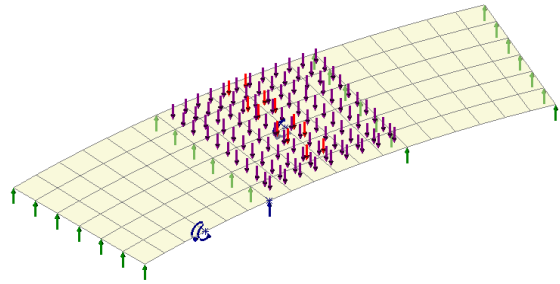

Viewing Characteristic Loading for Reaction at Support 2

- In the  Treeview right-click on the loadcase **Reaction support 2 – Point 3 – Positive – Characteristic** and pick the **Set Active** option.

In this last example, giving maximum reaction at the inner support, Group 5 dominates and the load pattern is made up of LM3 with associated LM1 tandems and udl patches. The SV1800/200 is positioned adjacent to the influence definition, near the edge of the deck over spans 1 and 2. This is considered to be Lane Number 1 (EN1991-2:2003 Annex A clause A.3). Lanes 2 and 3 appear on the far side of the deck and are loaded only in the adverse area, which happens to be in span 3. The 1m wide remaining area appears between lanes 1 and 3, illustrating yet another arrangement of lane rank and location, used to generate the most onerous traffic load pattern.

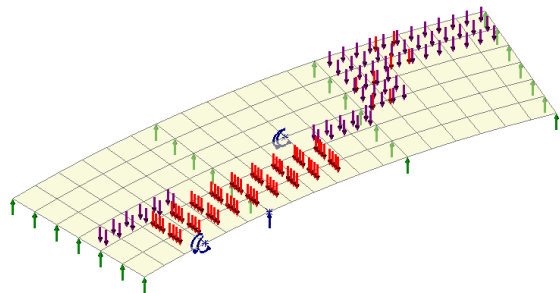



Note. As previously stated, the VLO run creates loading arrangements but no results. Results are available only after the VLO analysis has been solved.


Running a VLO Analysis

Only the VLO analysis has to be solved in order to produce the results for the optimised loading arrangements for each influence assignment.

- Press the **Solve Now**  button.

The Solve Now dialog indicates that the Analysis 1 (self-weight loading) and the Reciprocal Influence Analysis results are up to date and that they do need to be solved again.

VLO Analysis 2 is checked because the VLO run has not been solved yet.

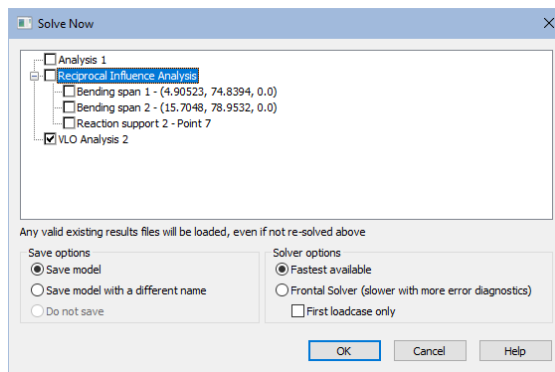

Note. As well as showing the status of each analysis, the Solve Now dialog also allows analyses to be solved in isolation from each other, if desired, so that self-weight (defined in Analysis 1) could be solved separately from the live loading.

Viewing Load Combinations

The LUSAS VLO facility outputs a design value – Characteristic, Combination or Frequent, with the meaning of each given in the VLO Help. In this example the vehicle loading is assumed to be the dominant effect and all other variable actions (wind, snow, temperature etc.) are being ignored. For this case, and in accordance with EN1990 6.4.3.2(3) equation 6.10, the loads can be combined as $\gamma_G \cdot [\text{dead loads}] + \gamma_Q \cdot [\text{traffic loads}]$. According to clause A2.3.1(4), for the design of structural members not involving geotechnical actions, the γ factors can be found in Table A2.4(B) as $\gamma_G = 1.35$ and $\gamma_Q = 1.5$ for traffic. So, to define a basic combination:

Analyses

Basic Combination

On the Combination Properties dialog:


- From the **loadcase** listing add **Self Weight** to the included panel.
- Add **Bending span 1 - (x,y) – Positive - Characteristic** to the included panel.
- In the grid, enter factors of **1.35** for self-weight loadcase and **1.5** for the Bending span 1 loadcase.

- Change the combination name to **Combination Bending Span 1** and click the **OK** button to update the combination in the  Treeview.

Plotting Contours of Moment and Peak Values

- In the  Treeview right-click on the loadcase **Combination Bending span 1** and pick the **Set Active** option.
- With no features selected click the right-hand mouse button in a blank part of the graphics window and select the **Contours** option to add the contours layer to the  Treeview. Note that by default, and in accordance with established theory, thick plate element results are given along a chosen global axis. Because we wish to look at radial results along the deck the cylindrical local coordinate system must be selected in order to make the appropriate results components available for selection.
- Select Entity **Force/Moment – Thick Plate** and then select the **Transformed** button and select the **Specified local coordinate** option. Ensure **Cylindrical about Z-axis** is selected in the drop-down list and click **OK**.
- Now, as a result of transforming the results, a new component is available in the Component drop down list. Selected moments in the theta direction **Mt**
- Click the **OK** button to display contours of moments in the longitudinal direction.
- With no features selected click the right-hand mouse button in a blank part of the graphics window and select the **Values** option to add the values layer to the  Treeview.

The values properties dialog will be displayed.

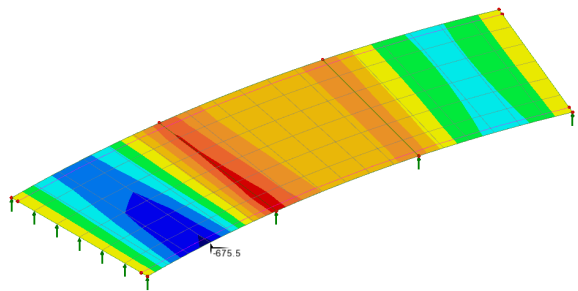

- Select Entity **Force/Moment – Thick Plate** and Component moments in the theta direction **Mt**, and then select **Averaged nodal**.
- Select the **Values Display** tab.
- Deselect the **Maxima** option since the sagging moment is negative (Minima will then be automatically selected). Change the percentage of values to display to **1**
- Set the number of significant figures to **4**
- Click the **OK** button to display contours of moments in the longitudinal direction with the bending moment value displayed.

Plotting stress contours and peak values for other load combinations and for other influence points of interest may be obtained in a similar manner to that described above.

Save the model

File
Save



Save the model file.



Note. When the model file is saved after results processing, all load combinations, envelopes, and graph datasets, if defined, are also saved and therefore do not have to be re-created if the model is amended and a re-analysis is done at a later date.

This completes the example.

Discussion

Traffic Load Optimisation for EN1991-2 design codes


To illustrate general usage this example analysed traffic load optimisation to EN1991-2 using the Recommended Values design code option.

By re-selecting the lines representing the kerbs on the Geometry layer and selecting an appropriate design code on the main Vehicle Load Optimisation dialog and re-running the traffic load optimisation analysis, the results for other supported EN1991-2 Design Code and National Annexes values can be similarly obtained.


When re-running the LUSAS VLO facility on the existing model care should be taken to ensure that the correct loadcase is included in the load combination and that the correct load factor has been specified.

Traffic Load Optimisation for EN1991-2 UK 2009


By following a similar procedure to that previously described the optimised load definitions for EN1991-2 UK (using a single SV80 special vehicle) can be obtained along with a contour plot for a basic combination of self-weight and combination results for bending in span 1, as shown in the following images.

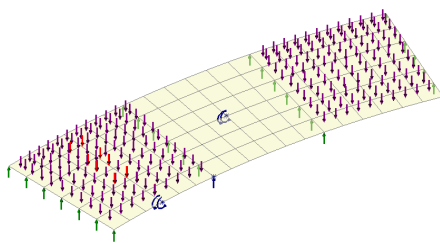


Optimised Characteristic Loading for
Influence Point at Edge Mid-span 1

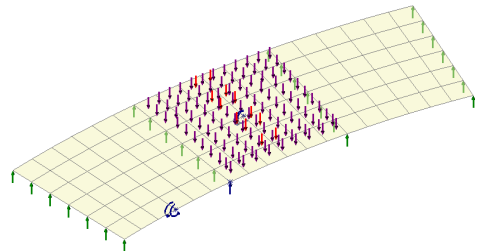

Optimised Characteristic Loading for
Influence Point at Mid-span Bending Span 2

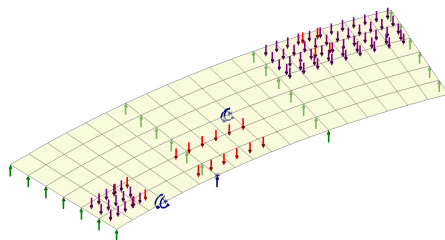

Optimised Characteristic Loading for the
Influence Point at Reaction at Support 2

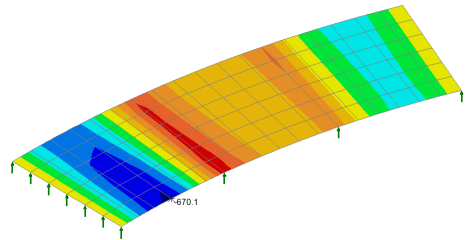


Combination results for Influence Point
at Edge Mid-span 1


Here, the two bending influences show Group 1A loading to be dominant. The LM1 tandem and LM1 udl are however different in value to those in the earlier example due to the use of the appropriate adjustment factors from NA to BS EN1991-2 Table NA.1. The reaction influence shows the Group 5 to be dominant. The UK SV80 appears in Lane Number 1, with associated LM1 also appearing in Lane Number 1, with a minimum 5m distance from the SV to the first axle of the LM1 TS. Lane rank and location are similar to those described in the earlier example.

Traffic Load Optimisation for EN1991-2 Sweden 2009


By following a similar procedure to that previously described the optimised load definitions for EN1991-2 Sweden (using all Complementary load model loads from ‘a’ to ‘l’) can be obtained along with a contour plot for a basic combination of self-weight and combination results for bending in span 1, as shown in the following images.

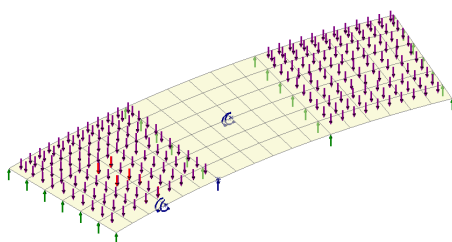


Optimised Characteristic Loading for the Influence Point at Edge Mid-span 1

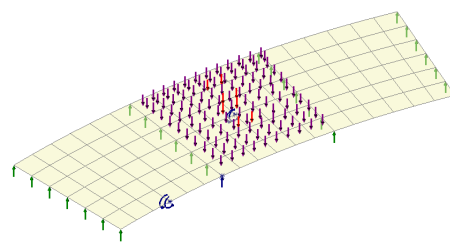

Optimised Characteristic Loading for the Influence Point at Mid-span Bending Span 2

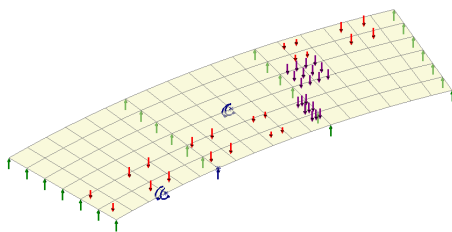

Optimised Characteristic Loading for the Influence Point at Reaction at Support 2

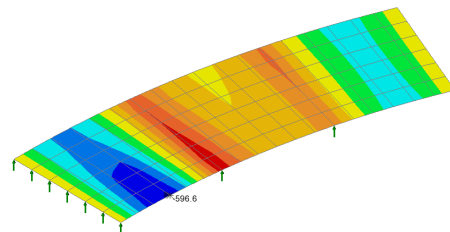

Combination results for the Influence Point at Edge Mid-span 1

Here, the two bending influences show Group 1A loading to be dominant. In accordance with SIS/PAS NA to EN 1991-2:2003 clause 4.3.2(3) and VVFS 2009:19 Chapter 6, clause 4, Table 7.1, adjustment factors for the LM1 tandem and LM1 udl are applied – hence there is no LM1 tandem in Lane Number 3 (factor $\alpha_{q3}=0$). Other comments on the EN1991-2 load patterns above also apply here. The reaction influence shows the Swedish Complementary Load Model to be dominant. Type L vehicles appear in Lanes 1 & 2, with udl q appearing in Lane 3 and no loading in the “remaining area”. Lane rank and location are similar to those described in the earlier example.

